

Remote Codes

Select the code that best matches your remote.



Atlas DVR1056BC

0854



UR2-CBL-CV04

011
072
073
095
103
238
241
245
247
096



Atlas DVR Day 1055

0854

Codes in **black** will allow your existing cable providers' remote to operate your SkyVue Outdoor TV.
Model number of your cable providers remote control is most commonly located on the back or within the battery enclosure and should be verified for accurate programming.

Remote Codes

Select the code that best matches your remote.



Charter 1060BC2

11423	10047
10000	10017
10463	11265
11265	10178



Atlas DVR 1054

0017	0463	0178
0092	1904	1929
1911	0016	1909



Atlas 4A

0854



Atlas XL 1047

0093
0165
0039
0688

Codes in **black** will allow your existing cable providers' remote to operate your SkyVue Outdoor TV.
Model number of your cable providers remote control is most commonly located on the back or within the battery enclosure and should be verified for accurate programming.


Remote Codes

Select the code that best matches your remote.



**Silver with Red
Ok/Select Button**

10017

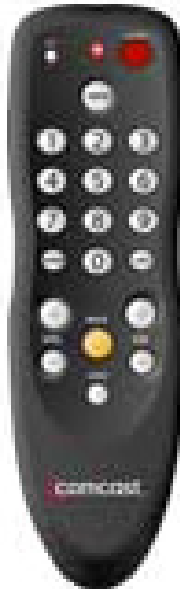

Atlas XL 1047

10017



**Silver with Grey
Ok/Select Button**

0017

Codes in **black** will allow your existing cable providers' remote to operate your SkyVue Outdoor TV.
Model number of your cable providers remote control is most commonly located on the back or within the battery enclosure and should be verified for accurate programming.

Remote Codes

Select the code that best matches your remote.



RT-U63CP

047 048
 049 050
 051 391
 405 406



UR4-P360SI

011 072
 073 095
 103 238
 241 245
 246 247



**RT-U59
 RT-U61CP**

047 048
 049 050
 051 391
 405 406



ER1

030
 031
 106



AT8400

1001 1004
 1122 1123
 1124 1125
 1158



IV RT-U46C

007 009
 023 035
 057 064
 067 096

Codes in **black** will allow your existing cable providers' remote to operate your SkyVue Outdoor TV.
 Model number of your cable providers remote control is most commonly located on the back or within the battery enclosure and should be verified for accurate programming.

Remote Codes

Select the code that best matches your remote.



III RT-U43C

007	009
023	035
057	064
067	096



ENT-8000 DVR Remote

081	014
019	028
004	022
091	143
175	029
236	251



UG3EXP

028	047
059	068



4-IN-1 DVR remote (Blk)

0026	0091
0192	0141
0200	0224

Codes in **black** will allow your existing cable providers' remote to operate your SkyVue Outdoor TV. Model number of your cable providers remote control is most commonly located on the back or within the battery enclosure and should be verified for accurate programming.

Remote Codes

Select the code that best matches your remote.



Atlas DVR-1056

0093	0039
0153	0157
0165	0220
0281	0386
0398	0491
0688	0689
0818	0851



AT 8550

1004	1006
1093	1094
1010	1022
1095	1100
1025	1079
1137	1139v



Atlas 1054

0093	0165
0689	0039
0165	0386
0688	



CLIKR-5

251	081
019	014
170	028
029	004
022	143
175	363
308	

Codes in **black** will allow your existing cable providers' remote to operate your SkyVue Outdoor TV. Model number of your cable providers remote control is most commonly located on the back or within the battery enclosure and should be verified for accurate programming.

RS232 Control Codes Baud rate 38400

Mute:	A0, F0, 55, FF, 14, EB
Menu:	A0, F0, 55, FF, 4E, B1
Right:	A0, F0, 55, FF, 05, FA
OK:	A0, F0, 55, FF, 02, FD
Down:	A0, F0, 55, FF, 0D, F2
Up:	A0, F0, 55, FF, 17, E8
Left:	A0, F0, 55, FF, 0C, F3
Source:	A0, F0, 55, FF, 01, FE
(1):	A0, F0, 55, FF, 42, BD
(2):	A0, F0, 55, FF, 43, BC
(3):	A0, F0, 55, FF, 0F, F0
(4):	A0, F0, 55, FF, 1E, E1
(5):	A0, F0, 55, FF, 1D, E2
(6):	A0, F0, 55, FF, 1C, E3
(7):	A0, F0, 55, FF, 18, E7
(8):	A0, F0, 55, FF, 45, BA
(9):	A0, F0, 55, FF, 4C, B3
(0)	A0, F0, 55, FF, 56, A9
Exit:	A0, F0, 55, FF, 1B, e4
Power On:	A0, F0, 55, FF, AE, 51
Power Off:	A0, F0, 55, FF, AF, 50
Power On/Off:	A0, F0, 55, FF, 0B, F4
Volume +:	A0, F0, 55, FF, 0A, F5
Volume -:	A0, F0, 55, FF, 40, BF
Channel +:	A0, F0, 55, FF, 55, AA
Channel -:	A0, F0, 55, FF, 5A, A5
Sleep:	A0, F0, 55, FF, 53, AC
AV:	A0, F0, 55, FF, ED, 12
HDMI1:	A0, F0, 55, FF, EC, 13
HDMI2	A0 F0 55 FF E1 1E
HDMI3	A0 F0 55 FF E3 1C
VGA:	A0, F0, 55, FF, EA, 15
TV:	A0, F0, 55, FF, E8, 17
Component:	A0, F0, 55, FF, E7, 18
Usb:	A0, F0, 55, FF, 57, A8
PMODE:	A0, F0, 55, FF, 4B, B4
Zoom:	A0, F0, 55, FF, 51, AE
Surround:	A0, F0, 55, FF, C7, 38
SMODE:	A0, F0, 55, FF, 5B, A4
Text:	A0, F0, 55, FF, 59, A6
VOL 25	A0 F0 55 FF 21 dE
VOL 50	A0 F0 55 FF 22 dD
VOL 75	A0 F0 55 FF 23 dC
VOL 100	A0 F0 55 FF 24 dB
Brightness_25	A0 F0 55 FF 26 d9
Brightness_50	A0 F0 55 FF 27 d8
Brightness_75	A0 F0 55 FF 28 d7
Brightness_100	A0 F0 55 FF 29 d6