

# Remote Control Guide



The SkyVue Remote Control is weatherproof

**PWR** - Switch the TV power on or enter standby.

**Input** - Push to change the viewing source on the television

**Vue** - Push to change format of the screen



**Stop** - Push this button to stop current content



**Rewind** - Push to watch previous content



**Play/Pause** - Push to play or pause current content



**Fast Forward** - Skips ahead in recorded content



Push this to display content information

**Guide** - Push to display guide for cable or satellite provider.



**Up Arrow** - Push to move menu selections up

**List** - Push to display recorded content on home DVR



**Flashback-** *To return to the previous channel, also to rewind in 10 second intervals.*



**Left Arrow** - Push to move menu selections left

**OK** - Push to make a selection in the menu or guide



**Right Arrow** - Push to move menu selections right

**Menu** - Push to access the television menu



**Down Arrow** - Push to move menu selection down



**Exit** - Push to exit current menu

**Vol +/-** Push these to increase or decrease

**CC** - Push to display closed caption on select content

**Mute** - Push to turn sound off, push again to have volume restored



**Home** - Push to directly access apps menu

**CH +/-** - Push to go up or down in channel numbers

**Numbers** - Push these to enter channel numbers and passwords

**Sleep** - Push to activate the sleep timer

**./-** Push to enter channels