

SKYVOE

OUTDOOR TELEVISIONS

Digital Lock With Alarm





 
FEATURES

The interval time between two detected vibration or removing the lock over three seconds activates alarm
Cutting the cable or removing the battery cover activates alarm
Wrong code entered 3 times activates alarm
Alarm will sound up to 105dB
Operating use temperature: -10 + 60

80cm toughened steel cable diameter:10mm
Four keys programmable up to 256 combinations of passwords
Easy operation, no need keys
3 x AAA size alkaline batteries operation(not included) low battery indicator
IP44 rating approved


DESCRIPTION OF COMPONENTS

- 1.Cable
- 2.Password key (1,2,3,4)
- 3.🔒/🔓 key
- 4.Buzzer
5. In-use/Battery low LED
6. Lock bar
7. Battery cover
8. Battery waterproof silicone

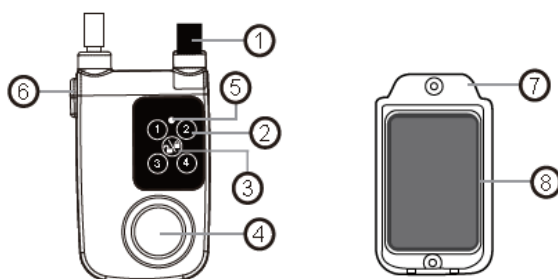

Batteries installation

 - a). Unscrew the battery cover to install three alkaline batteries,make sure installed correctly (Fig1), screw the battery cover back on.
- b). After the battery installation, the unit will sound 'Beep Beep', and the LED will flash 1 to 2 sec.
- c). Make sure the screws are tightened securely prior to using.

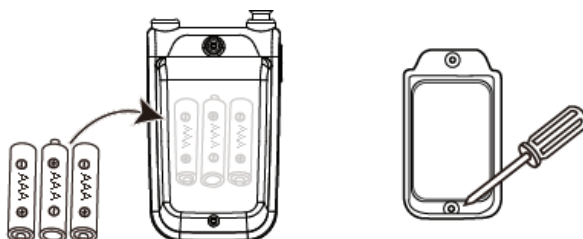



LOCK And UNLOCK LOCK:

 
- a). **LOCK:** Press [lock/unlock] button once and do not push the lock bar. The unit will sound three beeps, LED will flash every 3 seconds, then the unit is in the LOCK mode.
- b). **UNLOCK:** In the lock mode, enter your 4 digits password then press [lock/unlock] button. The unit will sound one beep, this sound will confirm lock mode is deactivated. LED will be off, then you can press lock bar and pull out cable. Hold down the button first then pull cable out.

Alarm mode

- a). In the locked mode, when anybody cuts the cable, the unit will trigger the alarm. Enter your password then press the [lock/unlock] button, the alarm will stop.
- b). In the locked mode, when anybody removes the battery cover, the unit will trigger the alarm instantly. Enter your password then press lock/unlock button, the alarm will stop.
- c). In the locked mode, when the wrong password is entered, the unit will send one long beep instantly. When you hear the long beep, you must key in right password. If you key in the wrong password three times within 10 seconds, the alarm will activate for 30 seconds.
- d). In the locked and vibration mode, when the unit detects a trigger for vibration or moving the alarm cord or lock, the unit will first turn on alarm 1 second for a warning. If the unit detects a trigger again after the next three to twelve seconds, the unit will turn on alarm for 30 seconds; If no vibration or movement is detected for three to twelve seconds, the lock will return to standby mode.

[LOW BATTERY DETECTION]


When battery goes low, the LED will flash once per-second, please change to new alkaline batteries immediately, otherwise the unit can't lock and unlock operation.

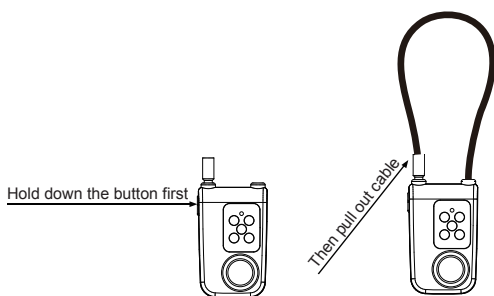



Alarm Installation

 1. Wrap the security wire through the mounting plate and post.

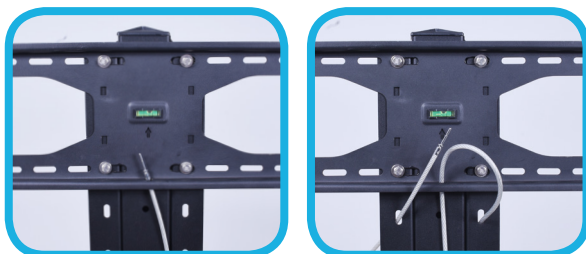


2. Wrap the security wire between arms and the back of the television.
3. After wrapping the security wire between the arms, cross the wire through the Anti-Theft Anchor Point located in the back lower corner of your television as shown below.



NOTE: This is shown with a post mount however we use the same tilt bracket for multiple installations including the ceiling mount.

OPERATION

To assure safety please change your password when you replace the battery each time. The factory setting password '1234'.

- a). Make sure the unit is not in the LOCK mode.
 - b). Press and hold the [1] button for 2 seconds, unit will sound a 'Beep' tone and the LED will flash
 - c). Key in the original password (default password '1234'), the unit will beep once. Please key in 4 digits new password (the password must be 4 digits), after the passwords input completed, the unit will beep 3 times to confirm the password change is successful.
- Note: Removal of the battery, the password and setup will reset to initial factory setting '1234'. If forget your password, please take the batteries out and press the  button for more than 5 seconds, the password and setup will reset to initial factory setting '1234'.
2. Programmable Vibration Detect Function ON or OFF (The unit initially factory set vibration detect function ON.)
 - a). Make sure the unit not in the LOCK mode.
 - b). Press and hold [2] button 2 seconds will hear a 'Beep', the vibration detect function set to Off
 - c). When you press and hold the number [2] button for 2 seconds again, will hear short 'Beep Beep', vibration detect function set at ON.

IMPORTANT SAFETY TIPS

The alarm is very loud, never put it close to your ear.
The security alarm can provide valuable protection for your TV,
however it does not guarantee complete protection from any losses.
Please take care of all of your property.

Congratulations you have successfully installed your
SkyVue Security Alarm. If you have questions feel free to contact our
technical support team **(877) 475-9883**

Trouble	Reasons	Solution
No alarm when triggered in the locked mode	1. Battery cover is loose. 2. The cable is not pushed in far enough. 3. Vibration detect function is off	1. Tighten screws securely in the cover. 2. Make sure the cable is plugged in lock hole and deep enough 3. Set off the vibration detect function when belongings are easily moved by others
No vibration detect function	1. Vibration detect function is off. 2. The strength of vibration is low	1. Check whether the vibration detect function is on 2. More than 0.6 kilogram impact force will cause the vibration
Can't unlock	1. Wrong password 2. Low battery 3. Lock bar gets stuck	1. Check whether the password entered is correct. 2. Check battery, when battery voltage is low, change new batteries, alkaline battery is suggested. 3. Check whether the lock bar gets stuck
Can't lock	1. Low battery 2. Lock bar gets stuck	1. Check battery, when battery voltage is low, change new batteries, alkaline battery is suggested. 2. Check whether the lock bar gets stuck

1. In order to reduce risks and losses, change new batteries immediately, when battery voltage is low. If you do not use the unit for a long time, please remove the battery to avoid battery leakage.

2. If ice or sleet is accumulated on the lock remove ice near the lock bar, this may cause the lock bar get stuck.

3. The lock does not have a memory. If the battery is changed or is discharged ,the password and setup will reset to initial factory setting(factory setting password '1234',vibration detect function is on) Please reset the password as soon as possible.